


Penetrations

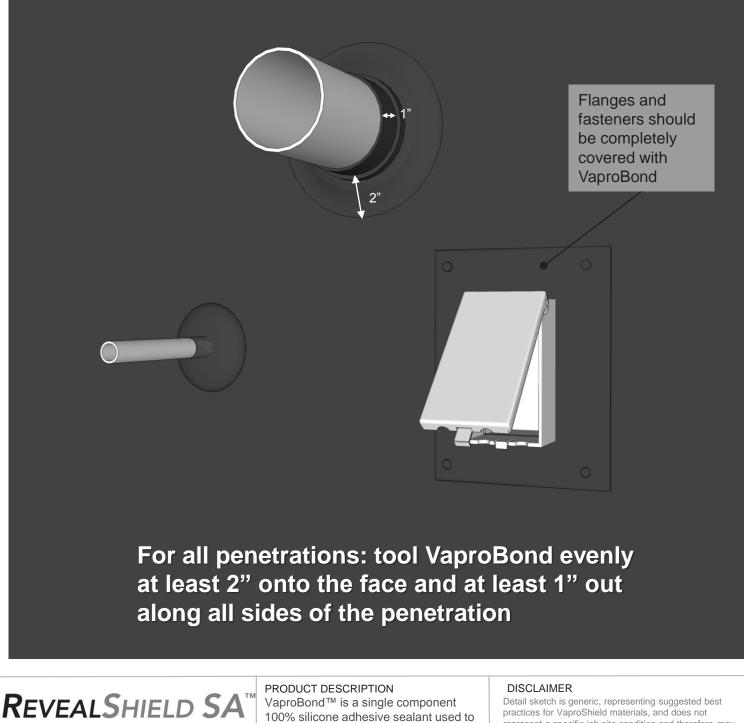

Detail sketch is generic, representing suggested best practices for VaproShield materials, and does not represent a specific job site condition and therefore may not be applicable to certain projects. Detail sketch is designed for use as a reference and must be approved by the designer/ consultant of record for each project prior to installation by the subcontractor. Changes and approvals of VaproShield details are the sole responsibility of the designer/consultant of record. VaproShield is **not** the designer of record for building enclosure details and takes no responsibility for the accuracy or interpretation of actual project site conditions.

DRAWN BY: AR REF: 195-B

DATE: 06/2017

SELF-ADHERED

VaproBond[™]

Always check www.VaproShield.com for the latest details and installation instructions

bind layers of VaproShield membranes

process of producing watertight, airtight

to each other or typical construction

material surfaces. It simplifies the

details.

VaproShield LLC | 915 26th Ave. N.W. Suite C5 | Gig Harbor, WA 98335 | Toll Free: 1.866.731.7663 | www.VaproShield.com | © VaproShield 6/28/2017 VaproShield Canada | 101-1001 West Broadway Suite 545 | Vancouver, B.C. V6H 4E4, Canada | Toll Free: 1.866.871.8263 | www.VaproShield.ca