


# SlopeShield Plus Self-Adhered Penetrations (Cold/Wet Conditions)

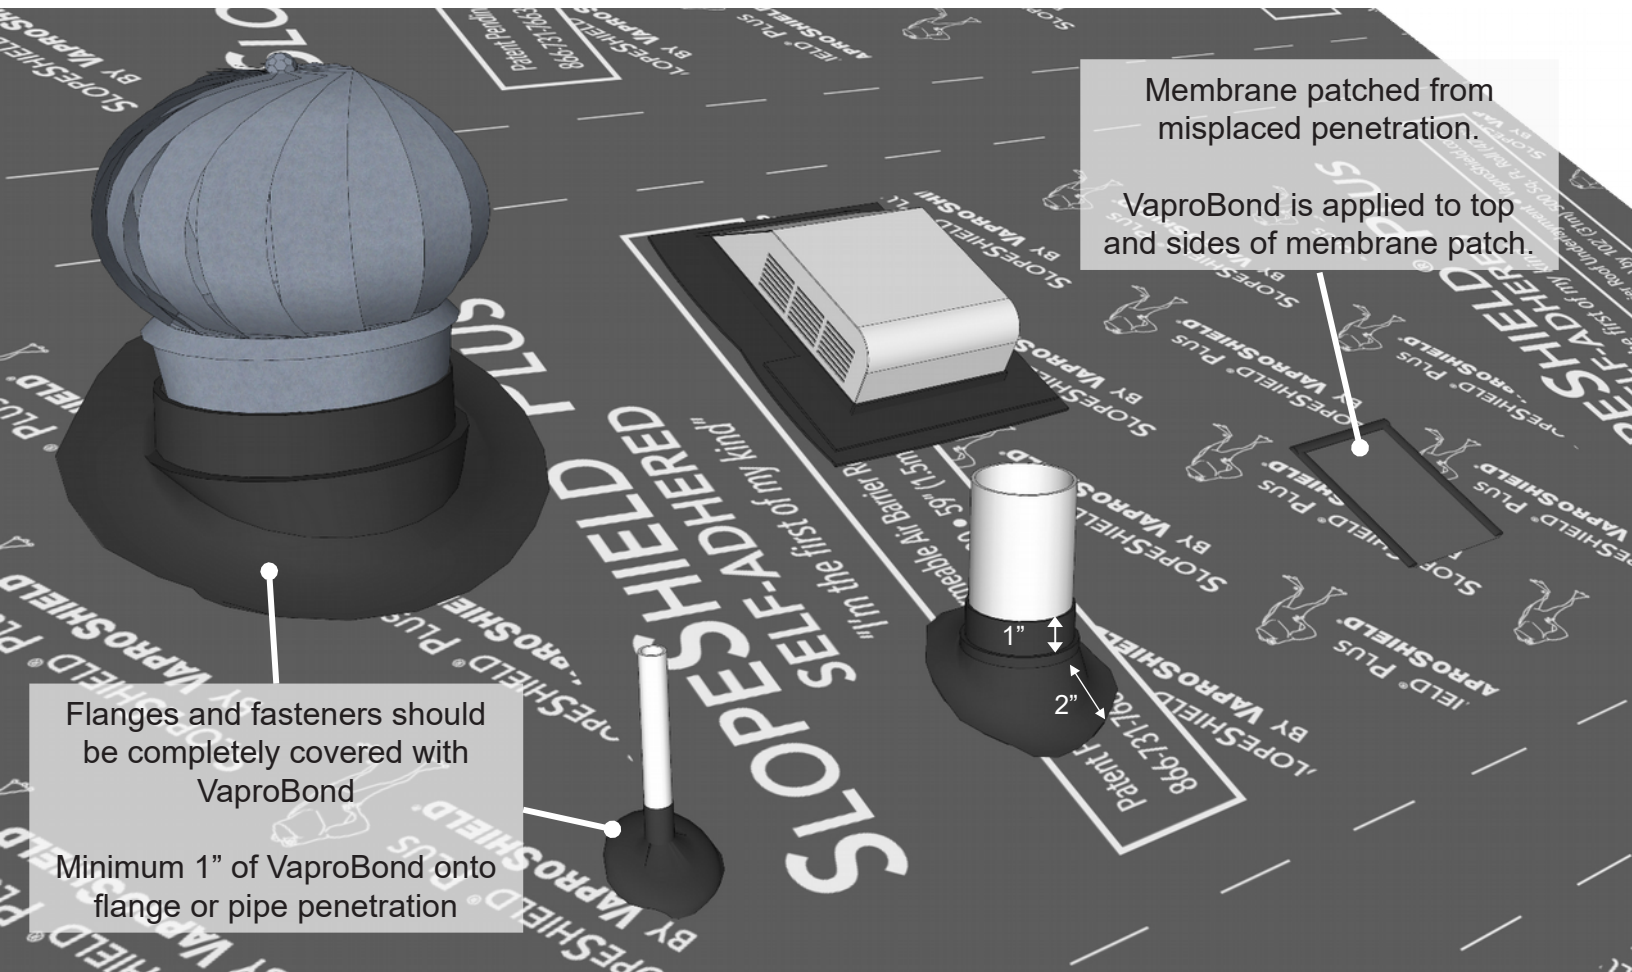

**For all penetrations: tool VaproBond evenly AT LEAST 2" onto the face and AT LEAST 1" out along all sides of the penetration**

**For questions regarding evaluation of job site conditions, please contact VaproShield Technical for assistance at 866-731-7663**

**SLOPESHIELD® PLUS**  
**SELF-ADHERED**

#### PRODUCT DESCRIPTION

VaproBond™ is a single component 100% silicone adhesive sealant used to bind layers of VaproShield membranes to each other or typical construction material surfaces. It simplifies the process of producing watertight, airtight details.

#### DISCLAIMER

Detail sketch is generic, representing suggested best practices for VaproShield materials, and does not represent a specific job site condition and therefore may not be applicable to certain projects. Detail sketch is designed for use as a reference and must be approved by the designer/ consultant of record for each project prior to installation by the subcontractor. Changes and approvals of VaproShield details are the sole responsibility of the designer/consultant of record. VaproShield is **not** the designer of record for building enclosure details and takes no responsibility for the accuracy or interpretation of actual project site conditions.

DRAWN BY: AR

DATE: 2/15/19

REF: 213-B

Always check [www.VaproShield.com](http://www.VaproShield.com) for the latest details and installation instructions