


Plywood Splines (Factory Applied SlopeShield Plus SA)

3" VaproTape

Note: Using VaproTape over seams may be omitted where slope is greater than 2:12

(Alternate option: VaproLiqui-Flash or 2" VaproTape)

SlopeShield Plus SA
(Factory Installed)

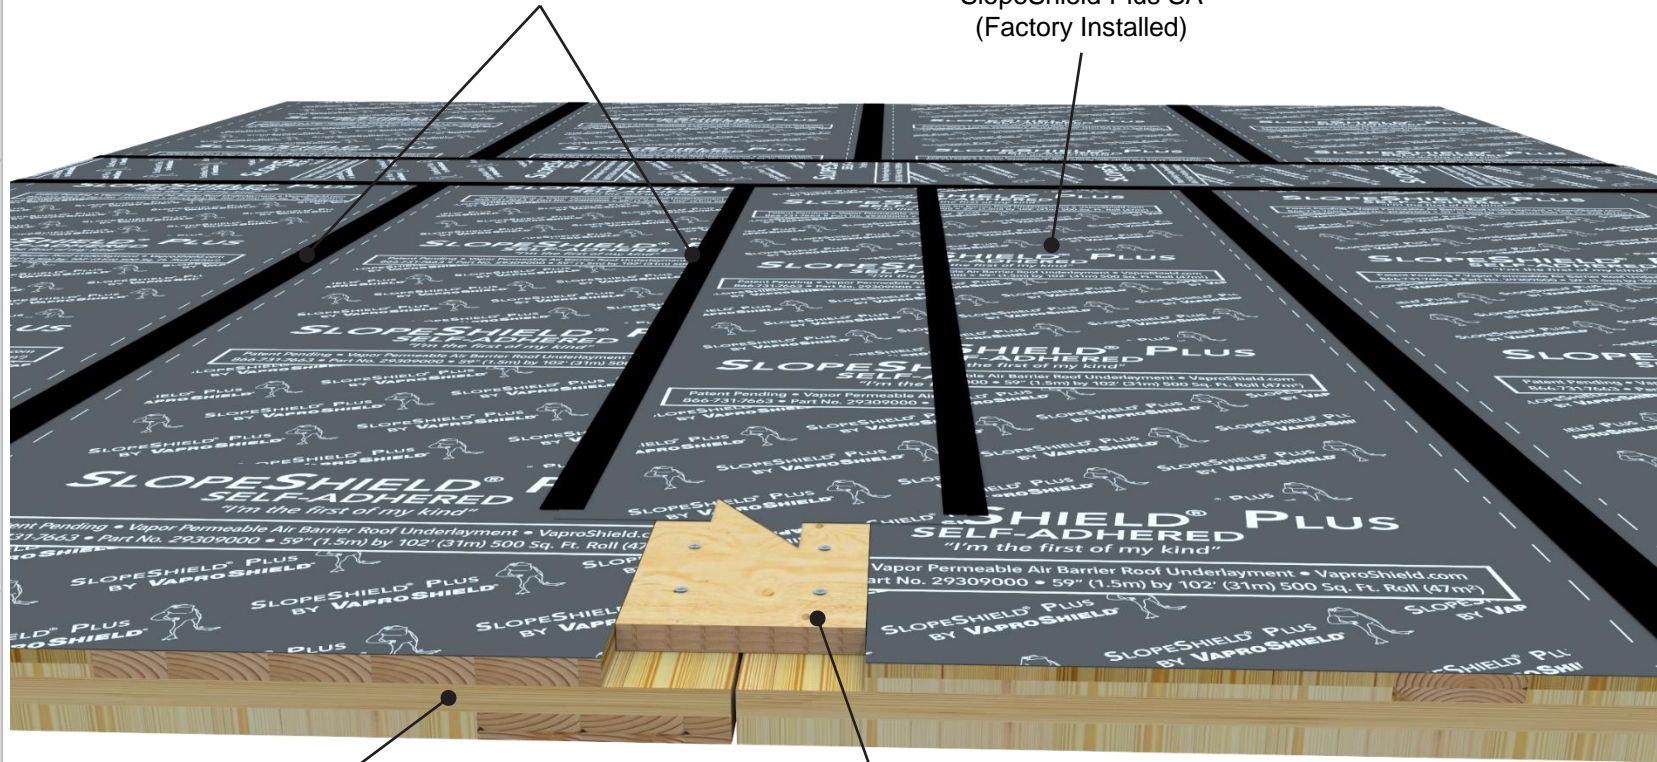

Mass Timber Panel

Recessed Plywood Spline

PRODUCT DESCRIPTION

SlopeShield Plus Self-Adhered is a highly vapor permeable roofing underlayment Air Barrier (AB) material

DISCLAIMER

Detail sketch is generic, representing suggested best practices for VaproShield materials, and does not represent a specific job site condition and therefore may not be applicable to certain projects. Detail sketch is designed for use as a reference and must be approved by the designer/ consultant of record for each project prior to installation by the subcontractor. Changes and approvals of VaproShield details are the sole responsibility of the designer/consultant of record. VaproShield is **not** the designer of record for building enclosure details and takes no responsibility for the accuracy or interpretation of actual project site conditions.

Always check www.VaproShield.com for the latest details and installation instructions

VaproShield LLC
915 26th Ave. N.W. Suite C5
Gig Harbor, WA 98335
Toll Free: 1.866.731.7663
www.VaproShield.com
© VaproShield 2024