



## Inward Floor Line **Movement Joint**

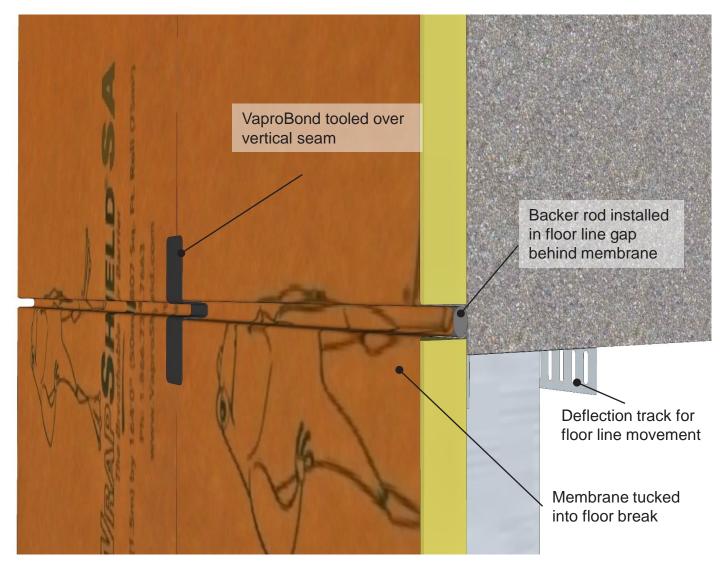

## Where required for building movement at floor line: Seal vertical seam in field membrane at floor line with VaproBond.

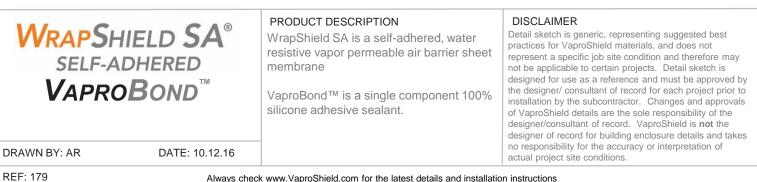

Always check www.VaproShield.com for the latest details and installation instructions

VaproShield LLC | 915 26th Ave. N.W. Suite C5 | Gig Harbor, WA 98335 | Toll Free: 1.866.731.7663 | www.VaproShield.com | © VaproShield 3/15/2016 VaproShield Canada | 101-1001 West Broadway Suite 545 | Vancouver, B.C. V6H 4E4, Canada | Toll Free: 1.866.871.8263 | www.VaproShield.ca