


## SlopeShield Plus Self-Adhered Penetrations

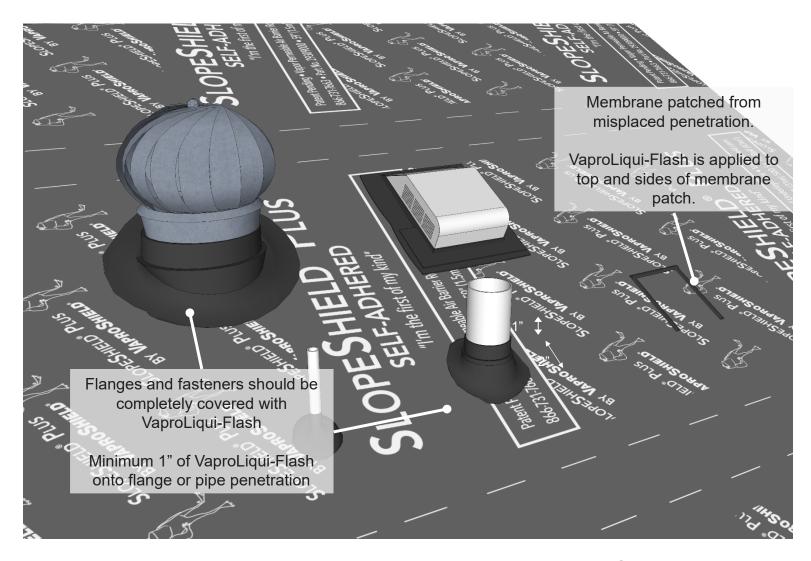

# For all penetrations: tool VaproLiqui-Flash evenly AT LEAST 2" onto the face and AT LEAST 1" out along all sides of the penetration

## SLOPESHIELD® PLUS SELF-ADHERED VAPROLIQUI-FLASH™

DRAWN BY: AR

REF: 213

DATE: 2/15/19

#### PRODUCT DESCRIPTION

VaproLiqui-Flash is a liquid applied, vapor permeable, waterproof, air barrier flashing system component for window and door rough openings. VaproLiquiFlash is designed to work with VaproFlashing and VaproShield field membranes as a complete system.

#### DISCLAIMER

Detail sketch is generic, representing suggested best practices for VaproShield materials, and does not represent a specific job site condition and therefore may not be applicable to certain projects. Detail sketch is designed for use as a reference and must be approved by the designer/ consultant of record for each project prior to installation by the subcontractor. Changes and approvals of VaproShield details are the sole responsibility of the designer/consultant of record. VaproShield is **not** the designer of record for building enclosure details and takes no responsibility for the accuracy or interpretation of actual project site conditions.

Always check www.VaproShield.com for the latest details and installation instructions