


# Legend

1. **WRAPSHIELD SA® SELF-ADHERED** or **REVEALSHIELD SA™ SELF-ADHERED** field membrane
2. Pipe penetrations: **VAPROBOND™** or **VAPROLIQUI-FLASH™** minimum 1 inch (25 mm) onto the penetration and 2 inches (51 mm) onto the **WRAPSHIELD SA® SELF-ADHERED** field membrane
3. Box penetrations: **VAPROBOND™** or **VAPROLIQUI-FLASH™** completely covering flanges and fasteners
4. CLT straps: **VAPROBOND™** or **VAPROLIQUI-FLASH™** to coat CLT strap anchors and 2 inches (51 mm) onto the **WRAPSHIELD SA® SELF-ADHERED** field membrane
5. Air and water seal at penetrations through conduits/electrical boxes

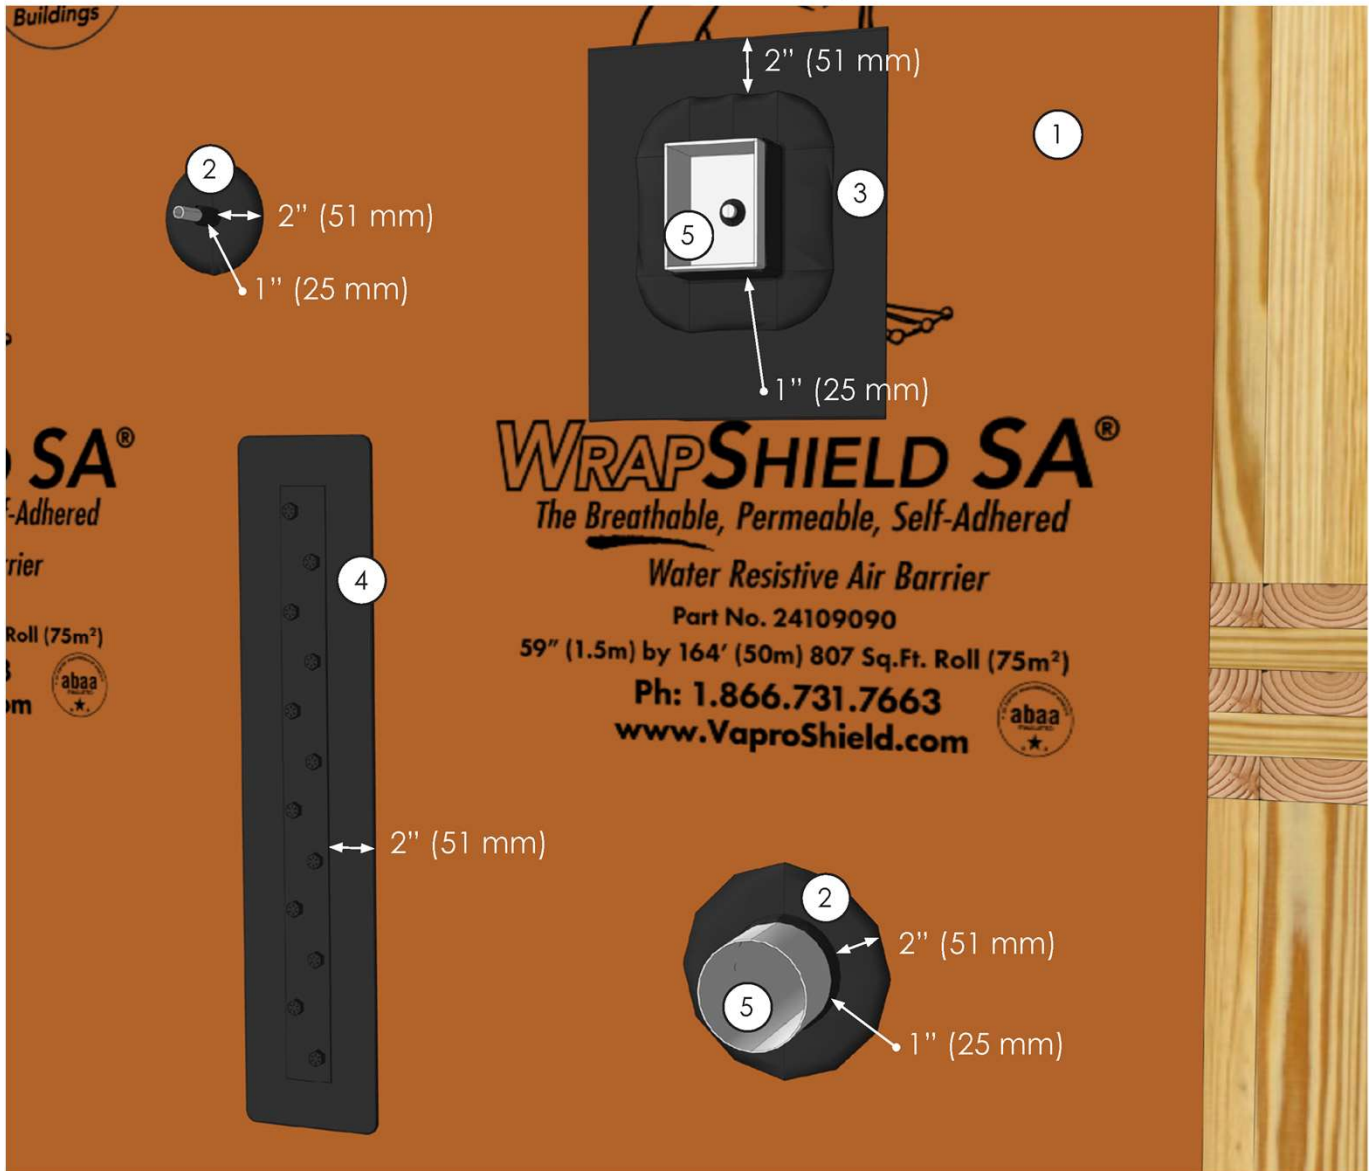

## CLT Penetrations



### DISCLAIMER

Detail sketch is generic, representing suggested best practices for VaproShield materials, and does not represent a specific job site condition and therefore may not be applicable to certain projects. Detail sketch is designed for use as a reference and must be approved by the designer/consultant of record for each project prior to installation by the subcontractor. Changes and approvals of VaproShield details are the sole responsibility of the designer/consultant of record. VaproShield is not the designer of record for building enclosure details and takes no responsibility for the accuracy or interpretation of actual project site conditions.

DRAWN BY: RDH

DATE: 5/14/19

REF: 220

Always check [www.VaproShield.com](http://www.VaproShield.com) for the latest details and installation instructions